

MAC8 / MAC8R Multi Access Controller

BASE


Page 1 of 4

Installation and Operations Manual

Micro-Series

Features

- Distributes Door Lock Power to 8 Fused or PTC Outputs through Isolation Relays
- Uses low-power Depluggable / Replaceable Relays
- Fail-Safe, Fail-Secure, Dry Contact or Fused-Output-Only selectable per Output
- FACP Interface for Emergency Power Disconnect
- Replaceable Disconnect Relay with Aux Contact
- Small Footprint PCB - 4.1" w x 6.0" h
- Includes Mounting Hardware

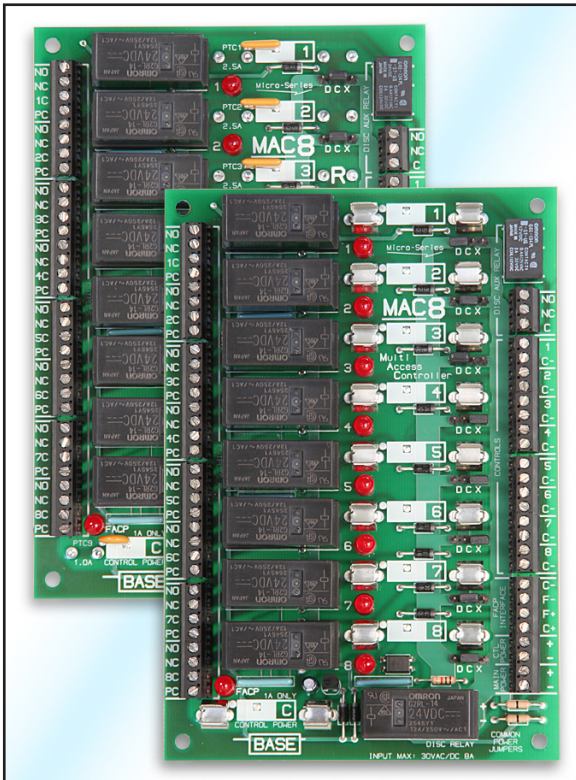

MAC8	Includes (8) 2.0 A replaceable fuses, standard 3AG (1/4" x 1 1/4")
MAC8R	Includes (8) 2.5 A PTC auto-resettable fuses

! WARNING Turn off all power feeding the module terminals before servicing or changing input/output wiring, removing or replacing fuses, etc. Failure to observe this warning may cause electrical shock hazard or may damage internal or external circuit components.

Install in accordance with all applicable sections of the National Electrical Code and other State or Local Regulations.

INSTALLATION


Locate the unit inside an enclosure, such as a BASE LVPC Power Cabinet or Econo•Box, close to the source power supply. Drill or punch (4) 0.187" diameter holes (3/16) to match the (4) corner holes in the printed circuit board. Push the nylon standoffs supplied into each hole and snap the module into place.

POWER SUPPLY WIRING

Common Power Supply for Outputs and Disc Relay Control
Do not cut Common Power Jumpers. Connect 12 or 24VDC power supply input leads to the **MAIN POWER** input terminals at the lower right side of the module. See Power Input Wiring Diagram 1.


Separate Power Supplies for Outputs and Disc Relay Control
Cut both Common Power Jumpers. Connect 12 or 24VDC Relay Control power supply input leads to the **CTL POWER** input terminals at the lower right side of the module.

Connect 12-24VAC/DC Door Lock power supply input leads to the **MAIN POWER** input terminals at the lower right side of the module. See Power Input Wiring Diagram 2.

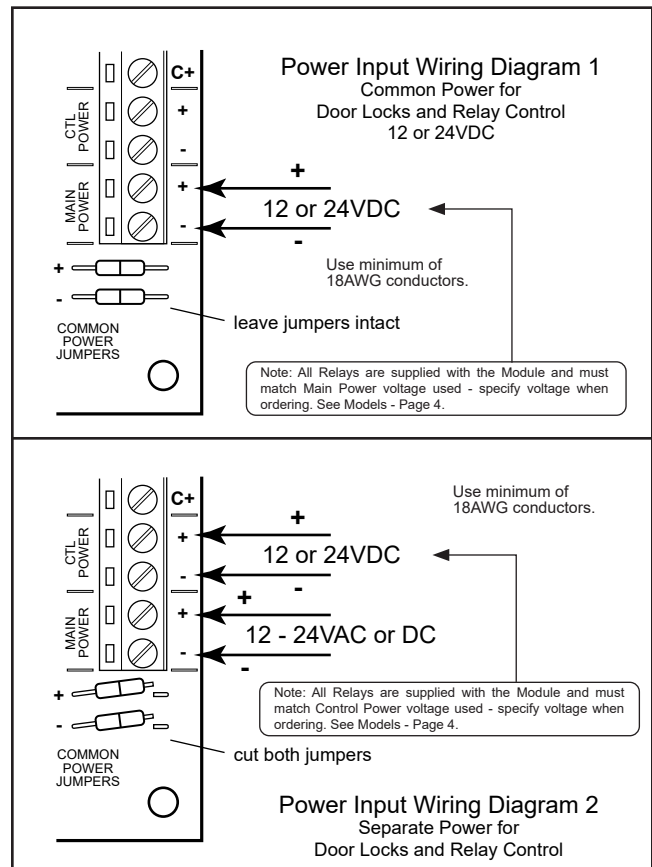




www.baseelectronics.com

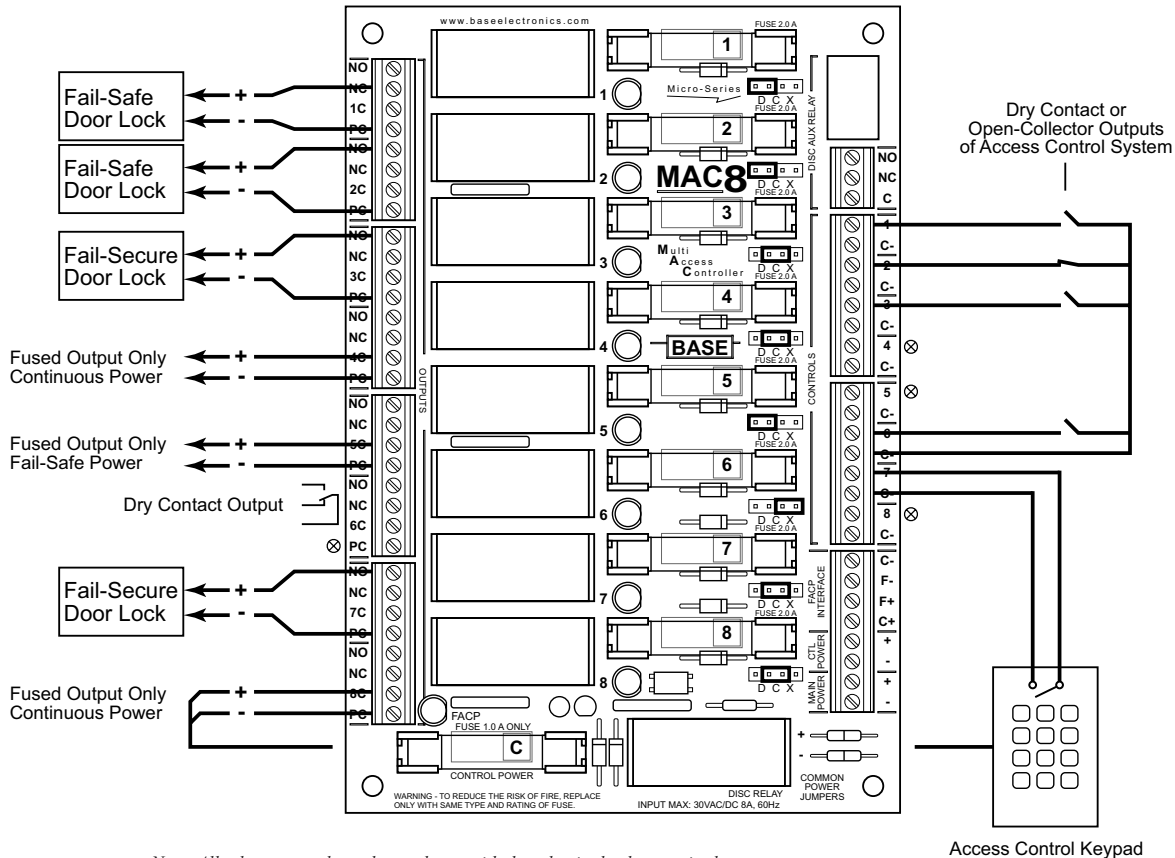Go!



Note: All relay contact legends are shown with the relay in the de-energized state.

SET OUTPUT CONFIGURATION JUMPERS

D = Disconnect	 Select D for Fail-Safe Output. Power is Disconnected when FACP Interface is in alarm. (Disconnect Relay de-energized)
C = Continuous	 Select C for Fail-Secure Output. Power is Continuous and unaffected by FACP Interface.
X = Dry Contact	 Select X for Dry Form-C Contact. Fuse may be removed or may be left in place. PC Output terminal not used.

OUTPUT AND CONTROL WIRING EXAMPLES ABOVE

In each example, note configuration jumper setting. Wiring is the same for MAC8 (shown) or MAC8R.

Channels 1 and 2 are both set up for Fail-Safe Locks. Relay 1 is controlled by a normally-open contact and energizes to unlock the door. Relay 2 is controlled by a normally-closed contact, so it is energized most of the time and de-energizes to unlock the door. The first method may be preferred to reduce relay maintenance and power consumption.

Channel 3 is the classic setup for a Fail-Secure Lock. Relay 3 is controlled by a normally-open contact and energizes to unlock the door.

Channel 4 shows an example of a continuous power Fused-Output-Only. No control contact is wired, therefore the relay is not being used and can be removed and saved as a spare if desired. The fused-output-only will function whether or not a relay is present.

Channel 5 shows an example of a Fail-Safe Power Fused-Output-Only. This output will lose power when the Disconnect Relay de-energizes on FACP interface alarm. The fused-output-only will function whether or not a relay is present.

Channel 6 shows the setup for a Dry Contact Output. Just place the jumper in the X position. The output contact will be dry whether or not a fuse or PTC is installed.

Channel 7 and 8 shows the setup for a stand-alone entry keypad. Channel 8 is set up as a Fused Output-Only to power the keypad. The keypad's control contact is wired back to input 7 to control a fail-secure lock.

CONTROL POWER FUSE

The **CONTROL POWER** fuse protects the relay control circuitry and components. Replace only with a 1 Amp fuse or less. Maximum control circuitry power consumption with all relays energized is 350 mA (at 12VDC).

DISCONNECT RELAY, AUX RELAY AND TERMINALS

The Disconnect Relay is operated by the FACP Interface. When the FACP Interface is normal, this relay will be on and will de-energize to drop power for Fail-Safe output devices when the FACP is in alarm. The Red **FACP** LED lights when this relay is energized.

MAC8 / MAC8R Multi Access Controller

A Disconnect Aux Relay is also provided at the upper right and mirrors the operation of the main Disconnect Relay. Terminals of the Aux relay dry contacts are provided and can be monitored to sense when the Disconnect Relay has changed state. Aux Relay contacts are rated at 2 Amps.

FACP INTERFACE WIRING AND OPTIONS

Choose the FACP Interface wiring method at right that is appropriate for your installation. If only one MAC8 module is being used, then wiring shown to the next module(s) can be ignored. Maximum current draw of FACP Interface circuitry (F+ and F- terminals) is 10 mA.

FINAL CHECKS BEFORE POWER UP


Before powering the unit, check all wiring and verify that the Disconnect and Aux relays are of the proper voltage and seated in their sockets. Output and Disconnect Relay sockets include a simple plastic retainer clip which should be used to properly secure the relay pins in the socket. The Aux relay fits well enough in its socket to eliminate the need for a retaining clip.

RELAY REPLACEMENT

All Relays are depluggable and replaceable. Inexpensive replacements are available from several manufacturers and are stocked by BASE. Specify Relay Voltage when ordering - 12 or 24vdc.

FUSE REPLACEMENT


Replace output fuses only with similar 3AG-type fuses, slow or fast blow, with a current trip rating of 2.0 Amps or less if desired. Replace Control Fuse only with 3AG-type 1.0 Amp. fuse.

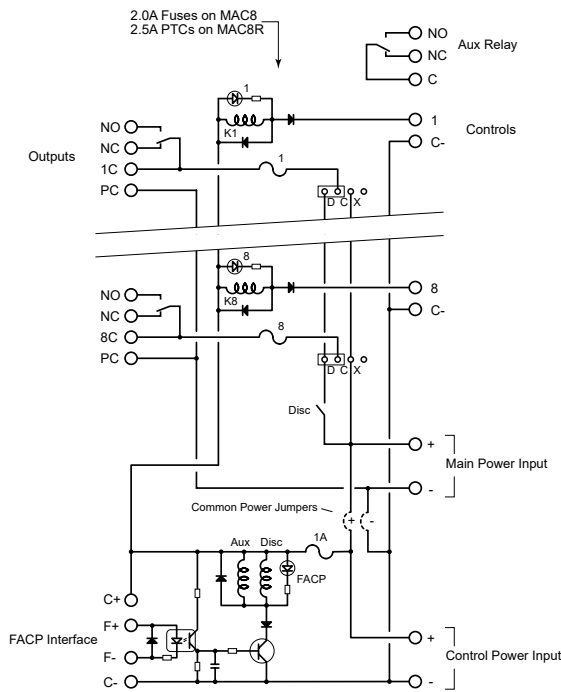

MAC8 / MAC8R Schematic Diagram


Master-Slave FACP Interface Wiring with NC Fire Alarm Contact

(Interface wiring is fused by first MAC8 Control Power Fuse)

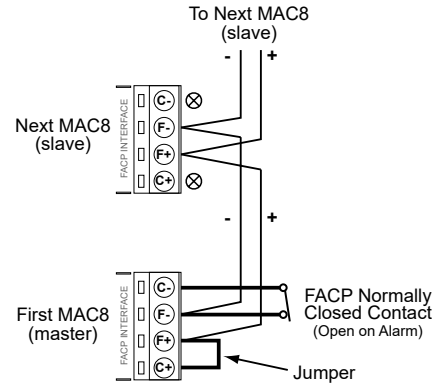

Alternate Master-Slave FACP Interface Wiring with NC Fire Alarm Contact


(Interface wiring is fused by each MAC8 Control Power Fuse)

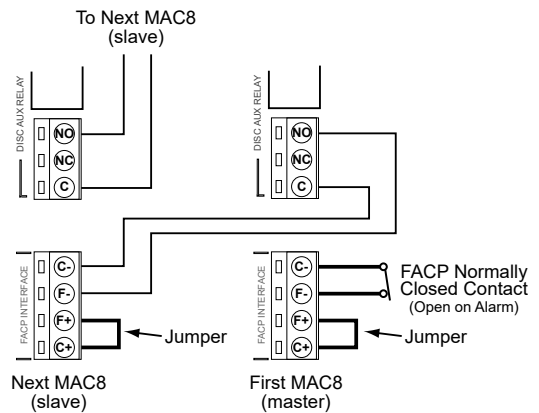

FACP Interface Wiring with FACP Voltage (12-24vdc)

(Interface wiring is fused by FACP Power Source)


- This wiring method has not been evaluated by UL. -

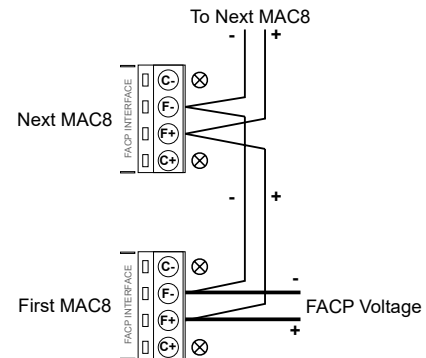

MAC8 / MAC8R Multi Access Controller

Micro-Series


6.00 (152.40mm)
5.80 (147.32mm)
0.15 (3.81mm) DIA HOLE
4 PLACES



NYLON MOUNTING STANDOFF
(4 INCLUDED WITH MAC8 OR MAC8R)

MAC8 / MAC8R Specifications

- Indoor Temperature Range: 0° C. to +49°C.
- Electrical
 - Maximum Main Power Input Voltage AC/DC: 30V
 - Maximum Total Current: 8A
 - Maximum Recommended Current per Output: 2.5A
 - Output and Disc Relay Contact Rating: 12A
 - Control Power Input: 12 or 24VDC (-10%, +30%)
 - Control Power Input Fuse: 1A fuse or PTC
 - FACP Interface Maximum Current Draw: 10 mA
 - Maximum Current Draw per Relay: 35 mA
 - Maximum Current Draw of Control Power Input: 350 mA
- Connections: Captive Screw Terminals for #14 to #22AWG Wire
PTC Outputs: 2.5A PTC Resettable Devices included (MAC8R)
Fuse Outputs: 2.0A 3AG-type Fuses included (MAC8)
- Other Features
 - Fail-Safe, Fail-Secure, Dry Contact, or Fused-Output-only selectable per output
 - All relays are low-cost, depluggable and replaceable
 - Outputs and Relay Control power can be commonly or separately powered
 - 9 Red LED indicators for relay status
 - Disconnect Relay Aux terminals for alarm monitoring
- Size: 4.12 (104.77) wide by 6.00 (152.40) high [inches (mm)]
- Mounting: (4) 1/4 inch high nylon standoffs included
- Models (Use these part numbers when ordering)
 - for 12VDC Control Power Input**
 - MAC8-12 Includes 8 replaceable 2.0A fuses, 12VDC relays
 - MAC8R-12 Includes 8 PTC resettable 2.5A fuses, 12VDC relays
 - for 24VDC Disconnect Relay Power Input**
 - MAC8-24 Includes 8 replaceable 2.0A fuses, 24VDC relays
 - MAC8R-24 Includes 8 PTC resettable 2.5A fuses, 24VDC relays
- Other related BASE products
 - PM8 / PM8R Power Distribution Module
 - DAC8 / DAC8R Direct Access Controller
 - LVPC Custom Prewired Power Cabinet Assemblies

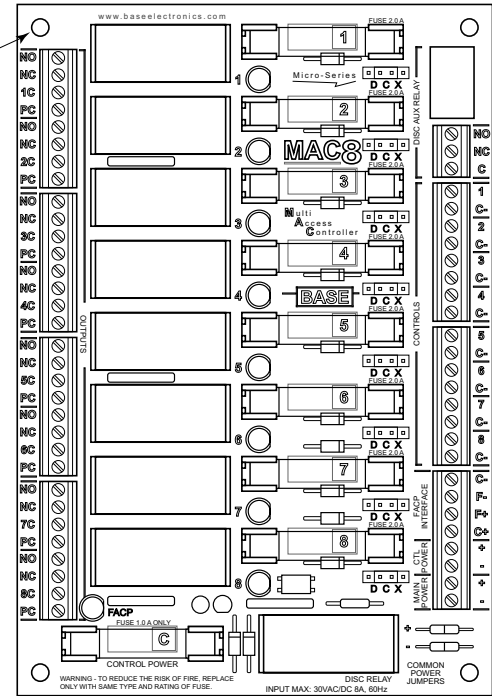

PC Board Footprint
(MAC8 shown - same for MAC8R)

The information in this manual is believed to be accurate in all respects. However, BASE Electronics cannot assume responsibility for any consequences resulting from the use thereof. The information contained herein is subject to change and BASE Electronics may issue a revision to incorporate such changes at any time.

Understanding PTC Resettable Fuses

When an overcurrent condition occurs on a PTC protected output, the PTC device will heat and its resistance will increase, thus limiting current flow. When tripped, though current will be reduced, the circuit is not open (like it is with a blown fuse), and a digital meter on the output will likely and normally indicate some voltage and current flow, which is necessary to maintain the tripped condition of the PTC. Trip time may vary from milliseconds to even minutes depending on the nature of the overcurrent condition.

Find other Power System Design Guides and Tech Tips at...

www.baseelectronics.com

Limited Warranty

The MAC8 / MAC8R is warranted by BASE Electronics against manufacturing defects in materials and workmanship for a period of 2 years from date of purchase. During this period, any warranty repair required will be made at no charge for parts or labor. This warranty does not apply to any work or materials provided by any outside persons or technicians involved in the installation, unauthorized repair, connection, or testing of this product. This warranty does not cover any damage or failure caused by or attributable to Acts of God, abuse, misuse, improper or abnormal usage, faulty or improper installation or maintenance, neglect or accident. BASE Electronics is not responsible or liable for any special, consequential or indirect damages resulting from or in connection with the use or performance of this product as pertaining to economic loss, property loss, costs for removal or installation, or loss of revenues or profit. Except as provided herein, BASE Electronics makes no expressed or implied warranties. The duration of product performance for its intended purpose is limited to the duration set forth herein.

For Warranty or other repair, send the product postage prepaid to BASE Electronics and include Sender's name, company, address, phone and brief problem description. BASE Electronics will notify sender of any required repair costs not covered under this warranty prior to making such repairs.

This Warranty gives you specific legal rights. You may have other rights that vary from state to state.

